



Chassis model X82		Since
	TRAFIC III	06/2014
	VIVARO II	06/2014
	NV300 (ex Primastar)	11/2016



■ TLS and TLM STEPS 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3	601	Undevelopped

Comments


Chassis in suitable condition for installing step.
Can be fixed using bolts in existing chassis holes, without drilling new holes.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3	601	Undevelopped

Comments

Chassis in suitable condition for installing step.
Can be attached using bolts in existing chassis holes, without drilling new holes.

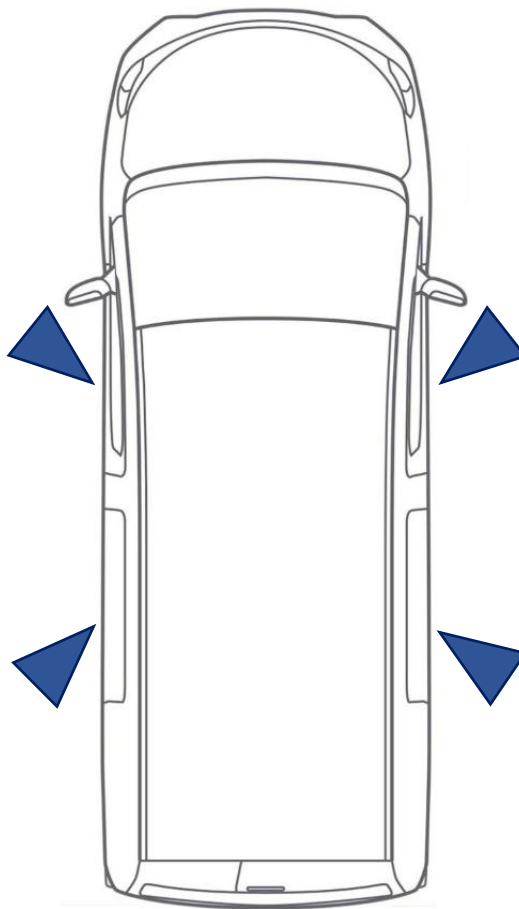

LEFT SIDE Door

Version	Step	Fitting kit
L1	601	M0007
L2 / L3	601	M0007
	901	M0008

Comments


Installation using screws and bolts in existing chassis holes, without drilling new holes.

RIGHT SIDE Door

Version	Step	Fitting kit
L1	601	M0005
L2 / L3	601	M0005
	901	M0006


Comments

601 and 901 range specially adapted due to exhaust pipe which provides limited depth.
Installation using screws and bolts in existing chassis holes, without drilling new holes.

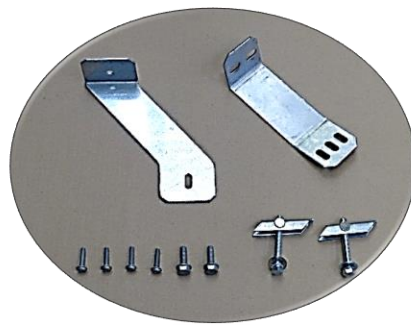

■ STEPS POSITION – RIGHT SIDE DOOR

601

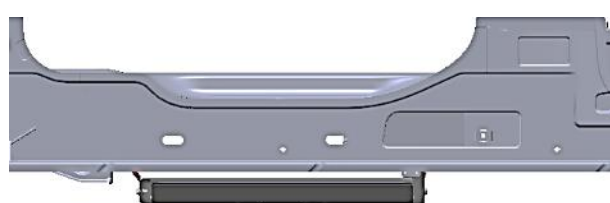

901



LEFT SIDE DOOR : symmetrical view